



# MICOM ELECTRIC DISPENSING POT Operating Instructions

微電腦電動熱水瓶

使用說明書

마이컴 전동포트

사용설명서

マイコン沸とう電動ポット

取扱説明書

## CD-LCC30 / CD-LCC40 / CD-LCC50

### INDEX

IMPORTANT SAFEGUARDS	1~2
Precaution	3~4
Nous indiquons les mesures de précautions suivantes	5
Name of Parts	6
How to Use	7~13
Cleaning and Maintenance	14~15
Changing the inner lid rubber seal	15
Before Calling for Service	16~17
Specifications	18

### 目錄

安全注意事項	19~23
各部分的名稱	24
正確的使用方法	25~30
保養	31~32
內蓋墊圈的更換方法	32
認為故障時	33~34
規格	35

### 차례

안전상의 주의	36~40
각부의 명칭	41
올바른 사용방법	42~47
손질방법	48~49
내부뚜껑 패킹의 교환방법	49
고장인가? 생각되면	50~51
정격	52

### もくじ

安全上のご注意	53~57
各部のなまえ	58
正しい使い方	59~65
お手入れ	66~67
内ぶたパッキンの交換について	67
「故障かな?」と思ったときは	68~69
仕様	70

# IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Do not close or clog the steam vent opening under any circumstances.
3. To protect against fire, electric shock and other injury to persons, do not immerse cord, plugs or the appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or other injury to persons.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of tables or counters, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet.  
To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. To protect against electrical hazards, unplug the cord at all times before cleaning.
15. Scalding may occur if the lid is removed during the boiling cycles.  
"This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way".

## SAVE THESE INSTRUCTIONS

### THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

- A. A short detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, (2) if the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

# **IMPORTANTES MESURÉS DE SECURITE**

**pour utiliser des appareils électriques, il faudrait toujours prendre les précautions de base, y compris les suivantes.**

1. Lisez toutes les instructions.
2. Ne touchez pas les surfaces qui peuvent être chaudes. Utilisez les poignées ou les boutons.
3. Pour éviter les chocs électriques, ne plongez pas le cordon, la fiche ou l'appareil portatif dans l'eau ou un autre liquide.
4. Surveillez bien les enfants s'ils utilisent un appareil ou s'ils se trouvent à proximité d'un appareil en marche.
5. Appareils portatifs. Débranchez l'appareil de la prise de courant quand vous ne l'utilisez pas avant d'enlever ou d'installer des pièces et avant de le nettoyer. Laissez l'appareil refroidir avant de le manipuler.  
Appareils branchés à demeure. Assurez-vous que l'appareil est ARRÊTÉ quand vous ne l'utilisez pas avant d'enlever ou d'installer des pièces et avant de le nettoyer.
6. Appareils portatifs. Ne faites pas fonctionner l'appareil si le cordon ou la fiche sont endommagés, si l'appareil ne fonctionne pas correctement, s'il est tombé ou s'il a été endommagé. Confiez au service de réparation recommandé le plus proche tout examen, réparation ou réglage électrique ou mécanique de l'appareil.
7. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut causer des blessures.
8. N'utilisez pas l'appareil à l'extérieur.
9. Ne laissez pas le cordon pendre par-dessus le bord d'une table ou d'un comptoir et assurez-vous que le cordon n'est pas en contact avec des surfaces chaudes.
10. Ne placez pas l'appareil près d'un brûleur à gaz allumé ou d'un élément électrique ou tension ou dans un four allumé.
11. Soyez très prudent en déplaçant un appareil qui contient du liquide chaud.
12. Le cas échéant, branchez toujours la fiche à l'appareil et assurez-vous que l'interrupteur de celui-ci est à la position ARRÊT (OFF) avant de brancher la fiche dans la prise. Pour débrancher l'appareil, placez l'interrupteur à ARRÊT (OFF) puis retirez la fiche de la prise de courant.
13. N'utilisez l'appareil que pour la fonction à laquelle il est destiné.
14. Pour vous protéger contre une secousse électrique, pensez à débrancher l'appareil avant tout nettoyage.

**CONSERVEZ CES INSTRUCTIONS  
CET APPAREIL EST RÉSERVÉ A L'USAGE DOMESTIQUE.**

# Precaution

## Before use

These warnings and cautions are intended to protect you and other persons from injuries and damage. To ensure safe operation, please follow them carefully.

## Warning

**Do not modify the dispenser. It should be repaired only by an authorized repair technician.**

- Improper repair may cause fire, electric shocks, and injuries. If repair is necessary, take it to the store where you purchased it or to an authorized repair center.

**Keep the unit and appliance cord out of the reach of infants. Do not let infants lick the magnetic appliance plug as it may cause electric shocks.**

**Keep the dispenser out of the reach of infants. Do not allow children to use the dispenser without supervision.**

- Children using the dispenser are at risk of scalding, electric shock, and injury.

**Do not soak the dispenser in water or allow it to be splashed. Do not place the dispenser on a wet surface such as a sink.**

- Doing so may result in a short circuit or electric shock.

**Do not add water above the maximum water level line.**

- Hot water may overflow and cause scalds.

**Do not close the upper lid forcefully.**

- Hot water may overflow and cause scalds.

**Do not allow the dispenser to be tilted or fall over.**

- If the dispenser is tilted or knocked over, hot water may spill out from the spout and steam vent and cause scalds, even when the automatic hot water supply lock is engaged.

**Do not carry the dispenser in your arms, tilt it, or shake it. Do not move it or pour hot water while holding the lid.**

- If the pot is tilted or knocked over, hot water may spill out from the spout and steam vent and cause scalds, even when the automatic hot water supply lock is engaged.

**Do not place a cloth any or other items over the steam vent.**

- Doing so may cause hot water to overflow, causing scalds.

**If the blades or surface of the electrical plug are soiled, wipe them clean.**

- A contaminated electrical plug may cause fire.

**Do not use the dispenser if the electrical plug or power cord is damaged or the plug is loosely inserted into the electrical outlet.**

- A loose or damaged plug can cause a short circuit that may result in electric shock or fire.

**Use only 120-VOLT AC electrical current.**

- Using any other power supply voltage may result in fire and electric shock.

**Do not scratch, damage, modify, forcefully bend, pull, twist, or fold the power cord. Do not place heavy items on the power cord, allow it to become pinched between objects, or modify it.**

- A damaged power supply cord may cause fire and electric shock.

## Caution

**Do not allow pins or other metal objects to contact the appliance plug.**

- Contacting metal objects may cause electric shock, a short circuit, and fire.

**Always grasp the power supply plug when unplugging the power cord.**

**Do not pull the power cord itself.**

- Doing so may cause an electric shock, a short circuit, or fire.

**Do not attempt to pour hot water while it is boiling or immediately after it has boiled.**

- Hot water can spurt out and cause scalds.

**Do not place the dispenser on an unstable surface or on surfaces that are vulnerable to heat.**

- Doing so may cause fire.

**When the Electric Dispensing Pot is used in highlands, it will continue to boil and may not switch to the keep warm mode.**

**Unplug the electrical plug from the outlet when the dispenser is not being used.**

- The insulation could become damaged, resulting in injury, burns, electric shock, leakage of electricity, or fire.

**To avoid burns, do not touch the steam vent.**

- Be especially careful that children do not touch it.

**When opening the upper lid, do not allow the steam to contact your skin.**

- Hot steam can scald your skin.

**Use only an electrical outlet rated at 15 amperes or more.**

- Do not share the electrical outlet with other appliances. Doing so may result in overheating and fire.

## Notes

**Do not turn on the dispenser if it is empty.**

- Doing so may cause fire or other damages.

**Be careful when using the dispenser on a kitchen storage shelf or within 1 foot of a wall or furniture.**

- If steam contacts the ceiling, wall or other items, it may cause discoloration or distortion of nearby objects or surfaces.

**Do not use the dispenser near a heat source.**

- Doing so may cause a fire or other damages.

**Do not drag the dispenser.**

- It may scratch the surface of tables or counter tops.

**Do not put ice, soup, milk, instant foods, tea, or any other substance except water into the dispenser.**

- Boiling water containing a tea bag, tea leaves, or instant foods can cause the water to foam and the contents of the pot to erupt and scald you. It can also result in burning and decomposition of the food as well as peeling of the nonstick fluorine coating on the container.

In addition, foreign objects may obstruct the internal electrical pump, preventing water from being dispensed.

**Do not store cold liquids in the dispenser.**


- Doing so can cause condensation on electrical components, which can result in damage to the unit.

# **Nous indiquons les mesures de précautions suivantes**

---

- **Ne pas modifier l'appareil. Le faire réparer par un technicien qualifié.**
- **Conserver l'appareil et le cordon hors de la portée des enfants. Ne pas laisser les enfants toucher la prise magnétique à cause des risques de chocs électriques.**
- **Conserver l'appareil hors de la portée des enfants. Ne pas laisser les enfants utiliser l'appareil sans la présence d'un adulte.**
- **Ne pas tremper l'appareil dans de l'eau et ne pas l'asperger. Ne pas poser l'appareil sur une surface mouillée telle qu'un évier de cuisine.**
- **Remplir le récipient d'eau de manière à ne pas dépasser la ligne indiquant le niveau d'eau.**
- **Ne pas forcer le couvercle du haut pour le fermer.**
- **Eviter d'incliner ou de renverser l'appareil.**
- **Ne pas le transporter dans vos bras ni l'incliner ou encore le secouer. Ne pas le déplacer ou verser de l'eau chaude en le tenant par le couvercle.**
- **Ne pas placer de tissu ou tout autre objet sur l'orifice d'échappement de la vapeur.**
- **Essuyer la prise électrique ou les fiches si elles sont souillées.**
- **Ne pas utiliser l'appareil si la prise ou le cordon électrique sont endommagés ou encore si la prise n'est pas adaptée à la prise murale.**
- **N'utiliser qu'un courant électrique AC de 120 volts.**
- **Ne pas gratter, endommager, modifier, tordre de force, tirer ou plier le cordon d'alimentation. Ne pas placer d'objets lourds sur le cordon d'alimentation et ne pas le coincer ou tenter de le modifier.**
- **Ne pas laisser des épingles ou tout autre objet en métal en contact avec la prise.**
- **Pour débrancher le cordon d'alimentation, le saisir toujours par la prise.**
- **Ne pas tirer directement sur le cordon d'alimentation.**
- **Ne pas tenter de verser dans l'appareil de l'eau en ébullition ou qui vient juste de bouillir.**
- **Ne pas placer l'appareil sur une surface instable ou dans un endroit sensible à la chaleur.**
- **Lorsque le pot électrique est utilisé en régions montagneuses, il n'existe pas de mode « Conservation de la température » et l'eau continue de bouillir.**
- **Débrancher l'appareil lorsqu'il n'est pas utilisé.**
- **Ne pas toucher l'orifice d'échappement de la vapeur pour éviter les brûlures.**
- **Eviter de laisser la peau en contact avec la vapeur en ouvrant le couvercle du haut.**
- **Utiliser un courant de 15 ampères ou plus.**

# Name of Parts

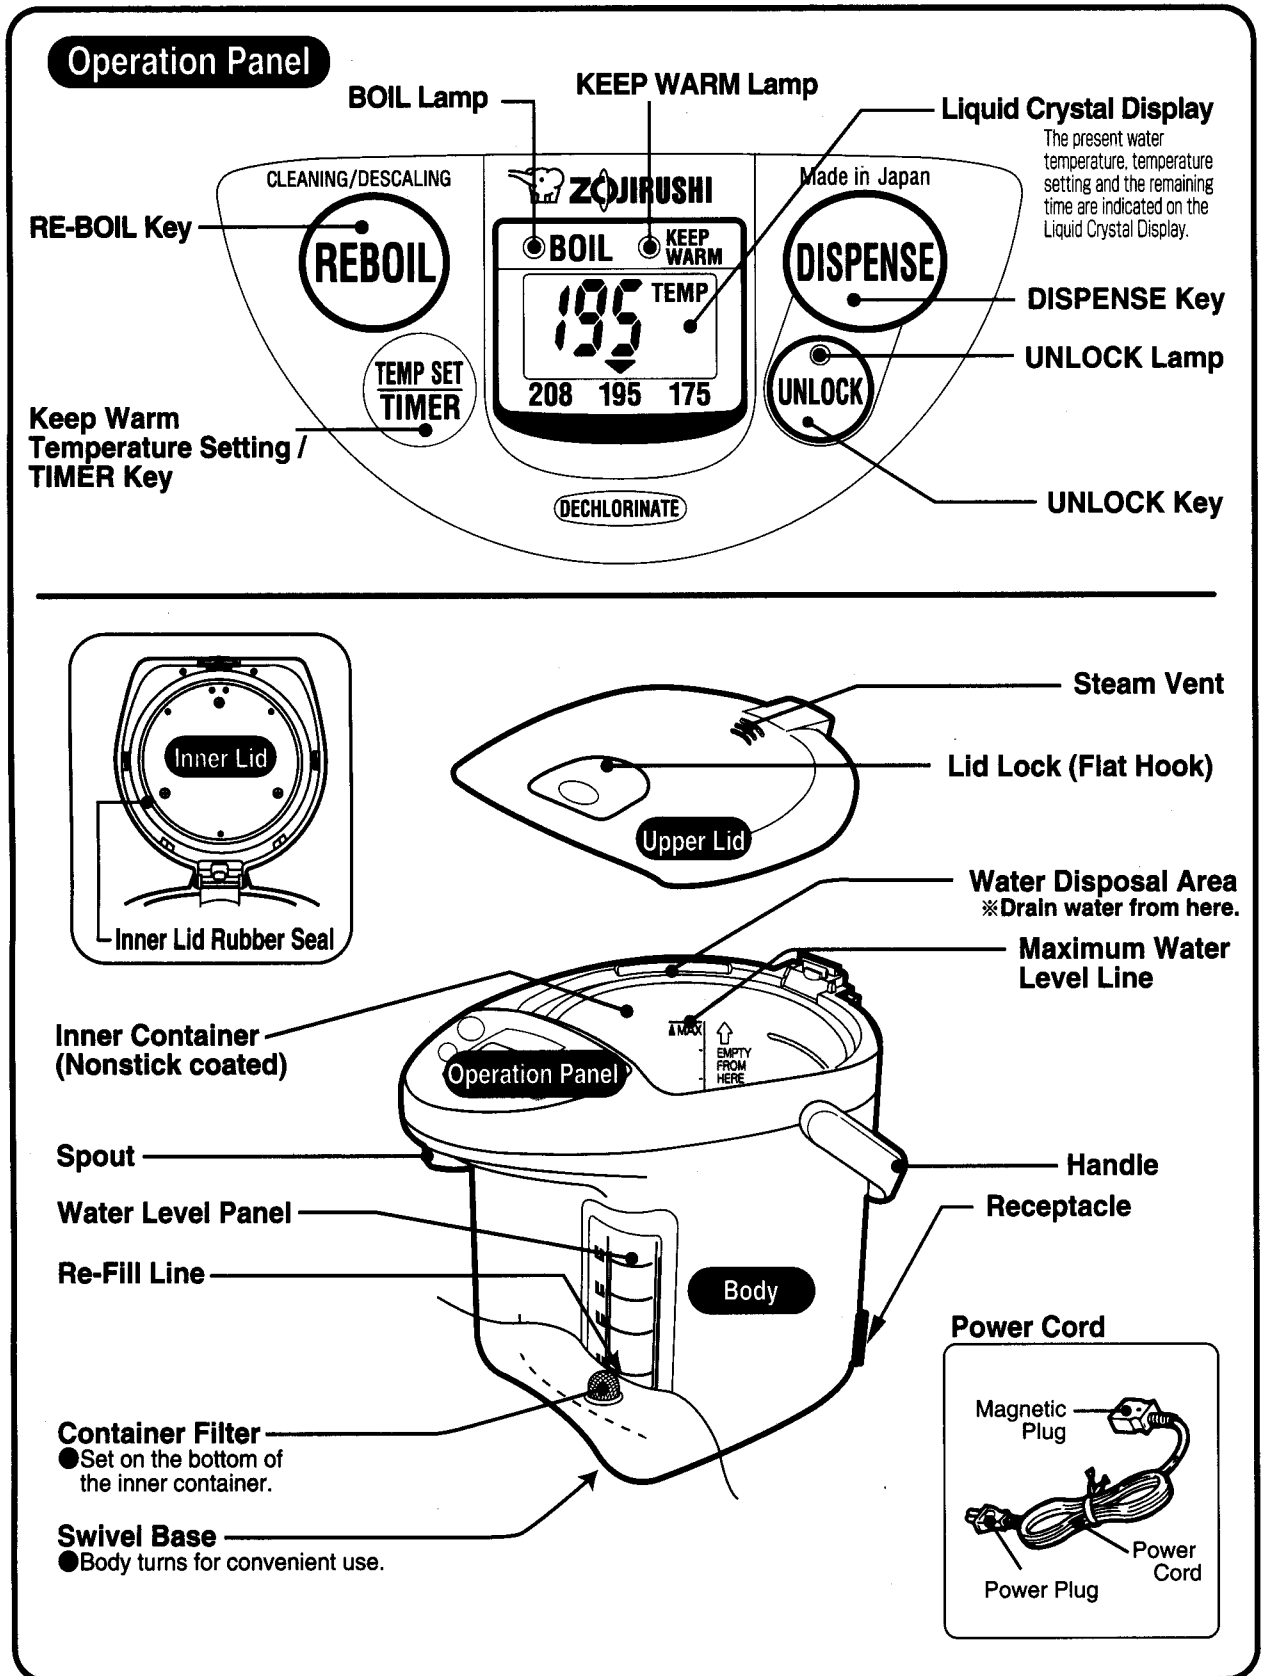


# How to Use

Before using your dispenser for the first time or after not using it for a long time, boil and discard one full pot of water by unlocking it and pressing the DISPENSE key. The first time you use the dispenser you may notice the smell of plastic. This is normal and will fade away gradually.

## 1. Open the lid and pour in water.

### Opening the upper lid

Push the hollow part of the Lid Lock (Flat Hook) and pull it up to open the lid.

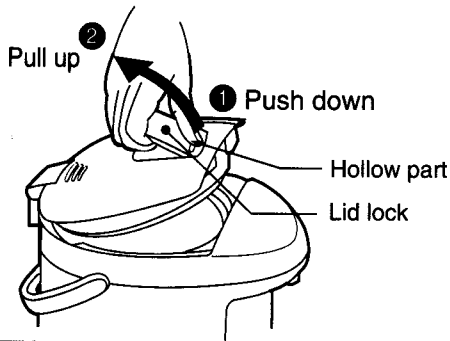


### To close

Securely close the upper lid till you hear a "click" sound.


### Removing the upper lid

Open the upper lid to an angle of about 45 degrees. While pressing and holding the Lid Lock (Flat Hook), detach the lid by pulling it forward and up at an angle.

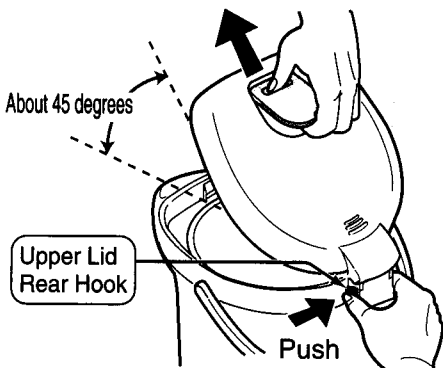


### To attach

Push the upper lid back into place at the same angle.

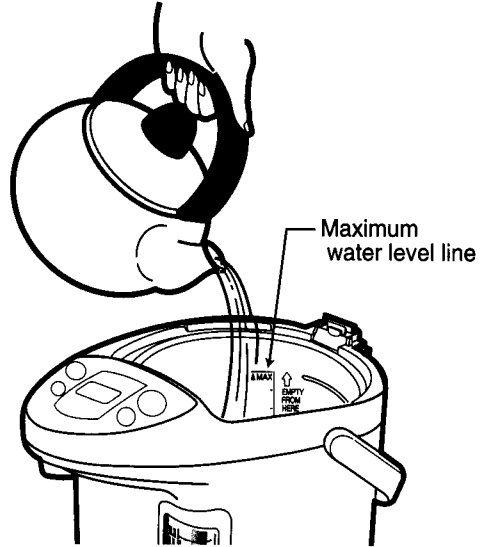

- Do not fill the container directly from the tap. Use another container. (Overflowing water could cause a short circuit or electric shock.)
  - Do not fill above the maximum water level line. (Hot water may overflow, causing scalding.)
  - Be careful not to splash water on the body or the Operation panel. (It can damage the dispenser and cause an electric shock.)
  - Ensure that the container filter is in place.
- ※ Adding hot water could activate the automatic shut-off feature.  
(See P 11 <Automatic shut-off feature>)

- The thickness of the water level pipe stripes on the water level gauge change depending on water volume.

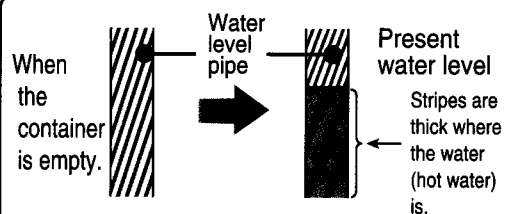





## 2. Boiling water (Steam blocking feature) → Keep Warm mode (at 195°F)

Water will automatically begin to boil when you plug it in.


The dispenser will automatically start to heat up the water when you plug it in.

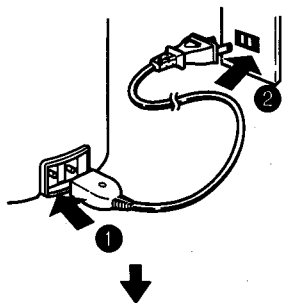

BOIL lamp comes on and liquid crystal display shows the temperature in 5 degree increments.

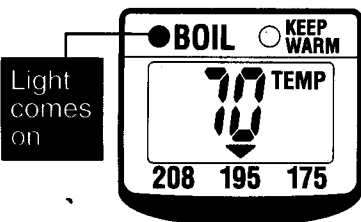

Once the water has boiled, the KEEP WARM lamp comes on. → Keep Warm (BOIL lamp turns off, and KEEP WARM lamp comes on)

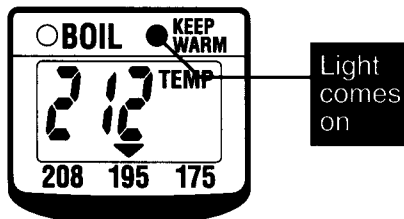

When the temperature reaches 195°F, the temperature shown on the LCD will change.



### Steam blocking feature

This feature blocks steam while water is boiling so that walls and furniture will not be affected by it.

※The steam blocking feature may not come into effect if the water volume is low or it is re-boiling.

- Do not open the upper lid when the BOIL lamp is on.
- Do not dispense hot water while it is boiling.
- Do not place a cloth over the steam vent.
- Be careful of steam coming out from the steam vent. (It may scald you.)

### ■ Time required to the boil

CD-LCC30	CD-LCC40	CD-LCC50
Approx. 27 minutes	Approx. 35 minutes	Approx. 45 minutes

(When the inner container is filled to capacity at room temperature and water temperature is approximately 68°F.)

※These times include approximately 3 minutes to de-chlorinate.


Pour more water when water level is low while the Keep Warm mode is on. (The unit will automatically switch to Boil mode.)

- ※If the water level is still not high enough, the water won't switch to Boil. In that case, press REBOIL Key.
- ※Be careful not to scald yourself by steam when opening the lid to add water.


# How to Use (Cont.)

## 3. Pour Hot Water

Press the UNLOCK key.

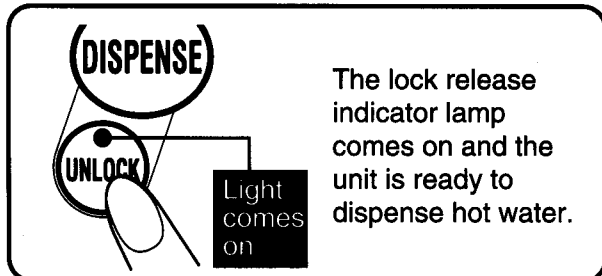

Press the DISPENSE key to dispense hot water.

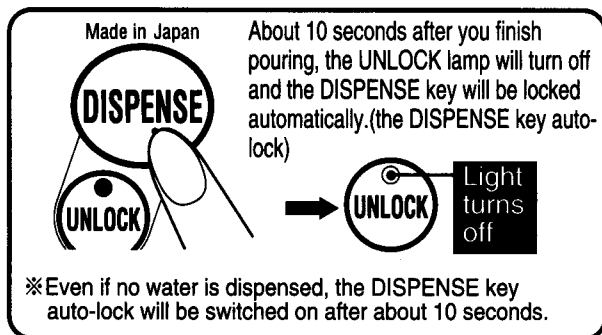


About the DISPENSE key auto-lock

A safety feature to prevent hot water from coming out if the DISPENSE key is accidentally pressed.

- Be careful not to turn the dispenser as you pour. (May cause scalding.)
- When turning the dispenser, be careful that the power cord does not coil around the body. (Dispenser could fall)
- Do not close the upper lid forcefully. (Hot water may splash out and cause scalding)
- Do not unlock and press the DISPENSE key if the inner container is empty. (Could cause damage.)
- ※ The first cup of water may not be very hot.
- ※ Water may not dispense smoothly immediately after boiling.
- ※ Be careful as the body heats up during the Boil and Keep Warm mode.

## 4. Disposing water

- 1) Unplug the dispenser and detach the upper lid.
- 2) Hold the dispenser with both hands as shown in the drawing below. (Hold it securely so that it won't slip out of your hands.)

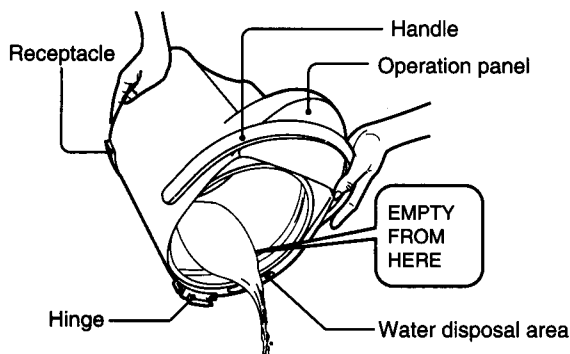


- Make sure to detach the upper lid when emptying water. (The upper lid could accidentally detach and cause scalding.)
- Wipe your hands dry before holding the plug or magnetic plug. (Could cause a short circuit or electric shock.)
- Do not allow water to splash on the operation panel, hinge, handle or Receptacle. (Could cause scalding or breakdown.)
- Be careful that water dripping out does not splash on your hands. (Could cause scalding.)
- Empty the container at least once a day. (Water left in the container can accumulate mineral residue.)
- ※ Be careful not to lose the container filter.

# Re-Boil

## Press REBOIL Key

Re-Boiling begins.  
(BOIL lamp comes on.)

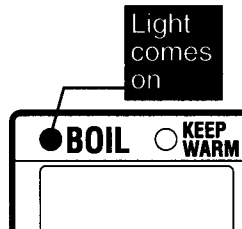

This feature is used when you want to re-boil water that is in the Keep Warm mode.



When re-boiling is complete → Keep Warm mode is on (BOIL Lamp turns off, and KEEP WARM Lamp comes on.)

### ■ Times required to finish re-boiling

	195°F Keep Warm	208°F Keep Warm
CD-LCC30	Approx. 4 minutes	Approx. 2 minutes
CD-LCC40	Approx. 4 minutes	Approx. 2 minutes
CD-LCC50	Approx. 5 minutes	Approx. 3 minutes

(At a room temperature of 68°F with the dispenser filled to capacity)

- ※ Steam blocking feature may not activate when re-boiling.
- ※ Make sure the water level is above the refill line before pressing the REBOIL Key.

# How to Use (Cont.)

## Automatic shut-off feature


The automatic shut-off feature activates to shut down electricity to the heater in order to prevent breakdowns from overheating. The LCD will display the following to advise you that the automatic shut-off has been activated.

### Causes:

- When plugged in without filling the container with water.
- Attempted to boil water when the water level is lower than the re-fill line.
- The dispenser is empty or the upper lid is left open for adding water.
- Hot water is poured in immediately after the dispenser is plugged in.

### Remedy

Allow the container to cool down. Fill the container with water and then press the REBOIL Key.

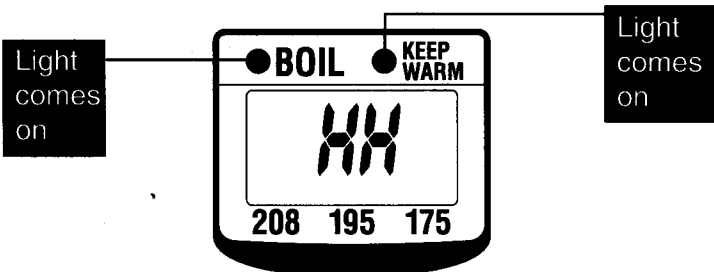


※Continued repetition of overheating or empty-boiling may cause discoloration or peeling of the nonstick coating.

# Changing the Keep Warm temperature settings

Press the TEMP SET / TIMER Key while boiling and select the temperature setting of your choice.

Each press moves the "▼" mark on the Liquid Crystal Display, altering the setting.

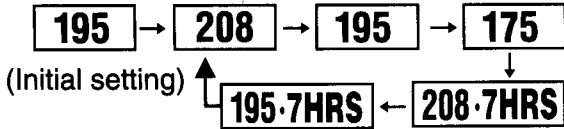


※The Keep Warm temperature is initially set at 195°F.

※The Keep Warm temperature can be set while the unit is on the Keep Warm mode. (The mode may switch to the Boiling mode depending on the hot water temperature.)

※If unplugged while on the Keep Warm mode, the temperature setting may revert to 195°F.


To reset the Keep Warm temperature to 208°F or 175°F press the TEMP SET / TIMER key.

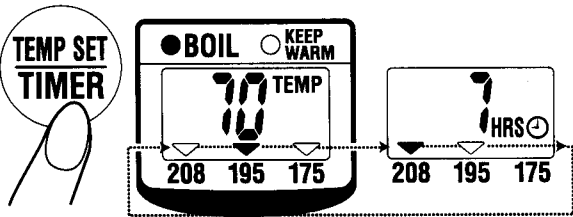


## Setting the Keep Warm mode to 208°F

208°F is an ideal temperature for making coffee, tea or cup noodles.

Once the water boils, the KEEP WARM lamp comes on.

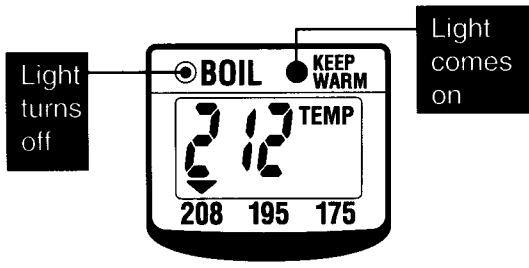

When the water temperature becomes 208°F, the LCD shows "208".

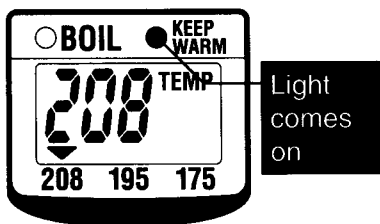


※Depending on the air pressure conditions, the Keep Warm mode may set in at 205~207°F, in order to prevent continuous boiling.

## Setting the Keep Warm mode to 175°F


Keeping the water temperature at approximately 175°F

Once the water boils, the KEEP WARM lamp blinks.

(Two seconds after setting the temperature to 175°F while in Keep Warm mode the light begins to blink.)

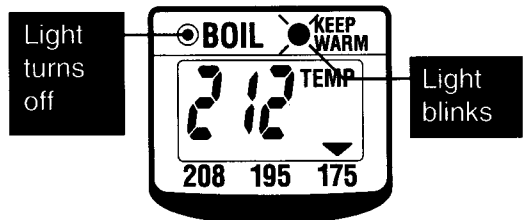

When the water temperature becomes 175°F, the LCD shows "175" and the KEEP WARM lamp changes from blinking to lighted.

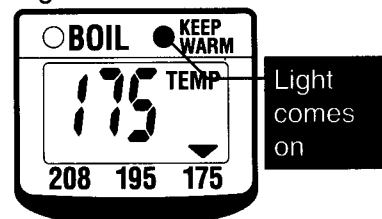

# How to Use (Cont.)

● If the unit is accidentally unplugged while on Keep Warm mode, the Keep Warm setting will automatically return to 195°F when plugged back in, and may begin to re-boil automatically. To cancel the re-boiling process, follow the procedures below.

1) Press the TEMP SET / TIMER key and set it to 175°F.

2) Press the REBOIL key.

※ The process can not be cancelled if the water temperature is low such as when cold water has been added.

※ To dechlorinate the water, bring it to a boil first. If it is interrupted before boiling, the dechlorinating process will not be completed.

※ Continued repetition of re-boiling and canceling could cause a breakdown.

Times required for water temperature to reach 175°F

5.0L	Approx. 1 hours 50 minutes
4.0L	Approx. 1 hours 40 minutes
3.0L	Approx. 1 hours 30 minutes
1 L	Approx. 50 minutes

(At a room temperature of 68°F)

※ These times may vary depending on the amount of water in the container and the room temperature.

※ To quickly lower the water temperature to the desired Keep Warm temperature, reduce the amount of hot water in the container.

※ If you add water while the water temperature is decreasing, the water may not come to a boil.

## Timer setting


A feature used to preset the timer so that hot water will be ready after seven hours.

When activated the electricity is automatically cut off until needed to heat the water.

Press the TEMP SET / TIMER key to set the timer.

(208°F / 7 hours or 195°F / 7 hours)

Crystal Liquid Display shows the preset time

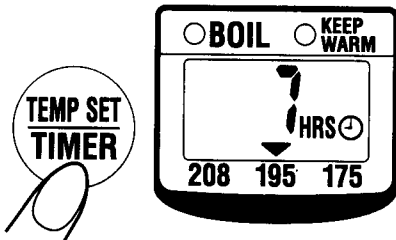

(The drawing shows that the time is set at a temperature of 195°F.)



Timer automatically starts.  
The Liquid Crystal Display will show the remaining time.



Water will be boiled after approximately 7 hours. BOIL lamp turns off, and KEEP WARM lamp comes on.

※ The Timer can not be set 175°F.

※ The timer will be cancelled and you will need to reset it if the unit gets unplugged after the feature is activated.

※ When you want to cancel the timer, press either the TEMP SET / TIMER key several times or the REBOIL key once.

# Cleaning and Maintenance

Before cleaning the dispenser, always disconnect the plug from the electric outlet, dispose remaining water and allow the body to cool down.

## Container

Red rust-like spotting, milky white or black discoloration and floating residue are caused by minerals in the water, not from discoloration or deterioration of the inner container itself. Although this is not a hygienic problem, it is recommended to clean the inner container periodically (every 1~3 months) with citric acid.

※The condition of the container depends on local water quality and how often you boil water.

### Cleaning the container with Activated Descaling Cleaner or citric acid


※If the container filter is dirty, remove it from the inner container, wash it with a brush, then put it back in.

1. Put 30g of citric acid or 1 pack of Activated Descaling Cleaner in a cup and dissolve it in warm water.
2. Fill the container with water and add the dissolved Activated Descaling Cleaner or citric acid from (1).
3. Plug the dispenser into the electric outlet, and press the REBOIL key for at least 3 seconds.

CLEANING/DESCALING




Cleaning cycle

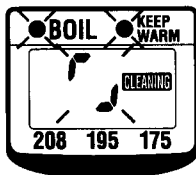

Approx. 1.5 hours

Completed

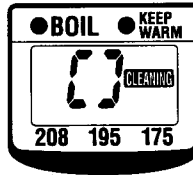

Do not fill water above the maximum water level line. (hot water may boil over)

Do not drink the water used for citric acid cleaning.

Time required for the cleaning cycle varies depending on water quantity, room temperature, water temperature, etc.

Repeated citric acid cleaning might be necessary for hard-to-remove residue.

Lamp and liquid crystal display do not blink simultaneously

Lamp and liquid crystal display remain lit

To cancel the citric acid cleaning cycle

Unplug the power cord for more than 5 seconds.

4. Unplug and discard the hot water.
5. To remove the smell of citric acid, fill the container with water, boil, dispense about a cup of hot water, and discard the rest.

If the Activated Descaling Cleaner is not available at your local store, please call Zojirushi Service Center at; 1-800-733-6270  
ADC-05 (Activated Descaling Cleaner, 1 oz)


## Container filter

**Remove the container filter from the inner container, and wash it with a brush.**

If the deposits cannot be removed, replace the container filter. Note the model number and purchase it at the shop where you purchased the dispenser.

※Never use the dispenser without installing the container filter. (The filter prevents foreign objects from entering the electric pump and obstructing the flow of hot water.)

Filter is installed at the bottom of the container.  
Pull on the filter to detach it.

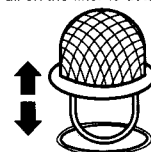

Firmly press the filter to re-attach.

# Cleaning and Maintenance (Cont.)

Upper lid / Body (exterior)	Wipe clean with a well-wrung damp cloth.
Electric Cord	Wipe clean with a dry cloth.
Inner lid	Wash it with a soft sponge, and rinse with water.

## Cautions

- Please perform regular cleaning and maintenance.
  - Using alkaline ion water creates calcium accumulation on the inner container. Leaving the water residue on the inner container or the container filter, causes loud boiling noises or restrains water dispensing.
  - Although the inner container is nonstick coated, strong discoloration may occur, if it is not cleaned for a long period of time.
- Never immerse the entire dispenser in water or splash water on the operation panel. Never place the dispenser upside down to dry when it is still wet. (Doing so can cause damage or rust.)
- Do not use the following items for cleaning.
  - Detergent (the smell remains)
  - Dishwasher or dryer (causes warping)
  - Abrasive cleansers, nylon or metal brush, metal spatula, etc. (scratches the inner container, inner lid, etc., or peels off the nonstick coating)
  - Benzene, paint thinner (cause deterioration of resins)

## Changing the inner lid rubber seal


The inner lid rubber seal is expendable. Check it about once a year. Replace with a new seal if steam happens to come out from the gap between the body and upper lid. The seals are available at a nominal cost. When replacing the seal, check the model number and purchase a new one at the store where the product was purchased or contact our authorized service center.

### To remove the inner lid rubber seal

- 1) Loosen the 3 screws.
  - \* Do not lose the screws.
- 2) Remove the rubber seal placed on the inner lid and middle plate.
  - \* Do not touch the tube set on the middle plate.

### To attach the inner lid rubber seal

- 1) Place the inner lid and middle plate correctly.
  - \* Make sure to insert the pin on the middle plate correctly into the installation hole on the inner lid.
- 2) Fit the rubber seal securely to the rim of the inner lid as shown in the figure.
- 3) Place them correctly onto the upper lid and tighten the screws securely.

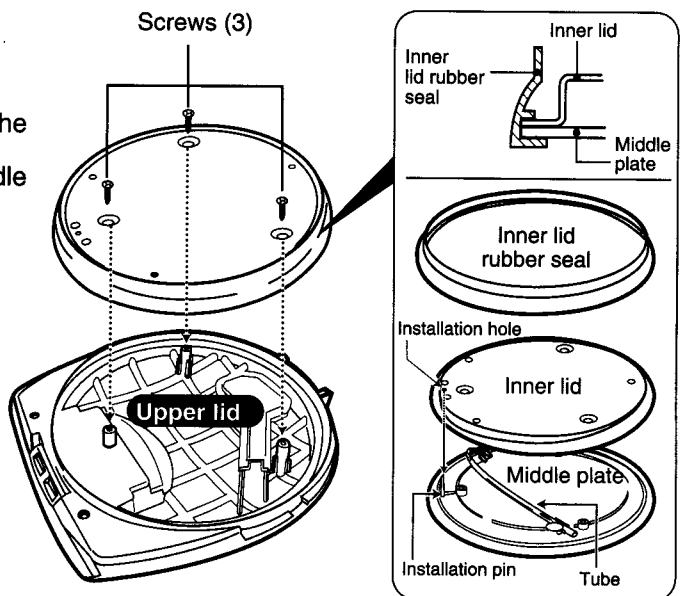





# Before Calling for Service

©Check the following points listed below before calling for service. If you are experiencing a problem that is not listed below, note the model number and contact the shop you purchased this product or call the Zojirushi Service Center at ; 1-800-733-6270

Condition	Cause	Remedy
<b>Water does not boil.</b>	Plug is not connected to an electric outlet.	Connect the plug.
<b>Water does not come out or pour properly.</b>	A metal object or dirt is on the tip of the magnetic plug.	Disconnect the plug and clean the magnetic plug tip.
	Dispenser release lock is engaged.	Press the UNLOCK key, then press the DISPENSE key. (See P. 9 "Pour Hot Water")
	Plug is not connected to an electric outlet.	Connect the plug.
	A metal object or dirt is on the tip of the magnetic plug.	Disconnect the plug and clean the magnetic plug tip.
	Mineral deposits and such have accumulated on the inner container and container filter.	Clean the container and the container filter. (See P. 14 "Cleaning and Maintenance")
<b>Water pours out by itself.</b>	Hot water does not pour properly a few minutes after boiling.	Open the upper lid once to release air bubbles, then close the lid. (Watch out for steam when opening the lid.)
<b>Rust-like spots appear on the inner container surface.</b>	Check that the pot is not filled over the maximum water line.	Pour out the excess water until it is below the maximum water level line.
<b>White residue appears in the hot water.</b>	Caused by iron in the water, not corrosion of the inner container.	Clean the inner container with Activated Descaling Cleaner or citric acid. (See P. 14 <Cleaning and Maintenance>)
<b>Loud boiling sounds can be heard.</b>	Residue is formed by the ingredient of water, not caused by corrosion of the inner container or peeling of the nonstick coating.	
	Excessive accumulation of mineral residue and the like on the inner container can cause loud boiling sounds.	

# Before Calling for Service (Cont.)

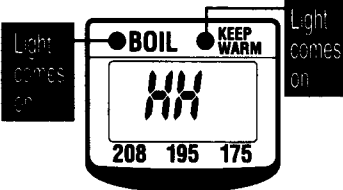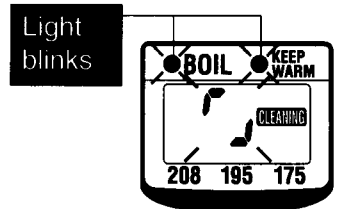Condition	Cause	Remedy
<p>The RE-BOIL lamp, KEEP WARM lamp and liquid crystal display simultaneously light up.</p> 	<p>Container is low on water or hot water was added to the container, causing the automatic shut-off feature to engage. (See P. 11 &lt;Automatic shut-off feature&gt;)</p>	<p>Wait until the container cools down. Add water and press the REBOIL key.</p>
<p>The BOIL Lamp, KEEP WARM lamp and liquid crystal display simultaneously blink.</p> 	<p>The container is in a citric acid cleaning cycle. (See P. 14 &lt;Cleaning and Maintenance&gt;)</p>	<p>To cancel the citric acid cleaning cycle, unplug the power cord and wait for more than 5 seconds before plugging in again.</p>

Condition	Cause
<p>Hot water has a disagreeable odor.</p>	<p>The chlorine odor may be detectable in your tap water.</p> <p>A mild plastic odor may be noticed with a new dispenser. This odor will fade away gradually.</p>
<p>The body becomes hot.</p>	<p>When the water temperature and / or room temperature is high, the outer surface of the body reaches about 140°F. This is normal.</p>

## Resin parts and the inner container (nonstick coated)

\* Some parts may become damaged after years of use. If replacement is necessary, contact the shop where you purchased this product or call the Zojirushi Service Center at; 1-800-733-6270

# Specifications

Model number		CD-LCC30	CD-LCC40	CD-LCC50
Capacity		3.0L	4.0L	5.0L
Rating		120V 800W 60Hz		
Average electric power consumption for Keep Warm mode	208°F	Approx. 47W	Approx. 51W	Approx. 59W
	195°F	Approx. 40W	Approx. 45W	Approx. 51W
	175°F	Approx. 32W	Approx. 36W	Approx. 41W
Power Cord		0.9m (2.9feet)		
Overall dimensions (inch)		9 X 11.8 X 10 (W X D X H)	9 X 11.8 X 11.4 (W X D X H)	9 X 11.8 X 13 (W X D X H)
Weight (including the cord)		Approx. 2.2kg (4.85Lbs)	Approx. 2.4kg (5.35Lbs)	Approx. 2.5kg (5.51Lbs)
Electric pump power consumption		Approx. 0.9W		

- \* The average Keep Warm electric power consumption is for one hour, provided that the dispenser is full and the room temperature is approximately 68°F.
- \* The height refers to the dispenser when the handle is down.
- \* The dispenser may not perform as expected in high altitude or severely cold areas. Avoid using the product in such areas.



[www.zojirushi.com](http://www.zojirushi.com)

CD-LCC型 N-