

REMINGTON®

MICROFLEX® 800



*Use and
Care Guide*

R-800
R-825

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while it is plugged in.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Use only when the shaver is in dry condition.
- Detach the appliance from the power supply cord before cleaning.
- Do not submerge shaver in water.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as is described in this manual. Do not use attachments not recommended by manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.
- Never drop or insert any object into any of the appliance's openings.

- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not plug or unplug this appliance when your hands are wet.
- Do not wrap the cord around the appliance.
- Do not use an extension cord or a voltage converter with this appliance.
- Always attach the plug to the appliance, then to the outlet. To disconnect, turn all controls to OFF, then remove plug from outlet. Detach removable power cords from appliances for storage.
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.
- Shavers, including the trimmer, are for use on facial hair only. Should not be used for shaving the hair on your head or any other part of your body.
- The hand-held unit shall be detached from the power supply cord before cleaning.
- The shaver may not be used until it has dried.
- Store the shaver and cord in a cool, dry place when not in use.

SAVE THESE INSTRUCTIONS


Contents

English1
 Spanish13
 French25

Product Features

Shaver Parts

 - (A) Head guard
- (B) Head & cutter assembly
- (C) ComfortSelect™ lever
- (D) On/off button
- (E) Percentage of charge 6 LED's (R-825)
- (F) Hair pocket release button
- (G) Cleaning brush
- (H) Storage pouch
- (I) Charger
- (J) Trimmer button

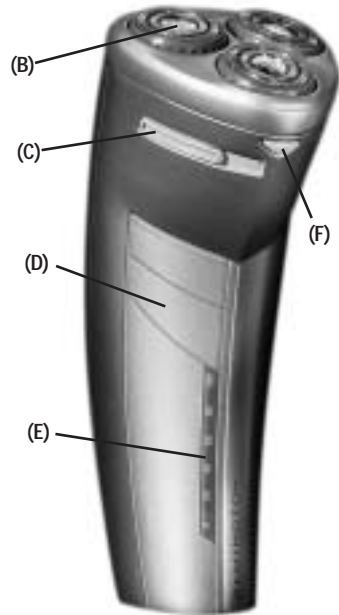

(A)



(I)



(H)



(G)



(J)

Easy-View® Trimmer

Congratulations on your purchase of a premium Remington® shaver. The MicroFlex® 800 has Revolutionary Titanium Shaving Technology.

Which model is yours?

	Power system	Run time	Quick charge	Indicator lights			Worldwide voltage	Washable
				Charging	Low battery	Fuel		
R-800	Cord/cordless	60 min	x	x	x		x	x
R-825	Cord/cordless	60 min	x			x	x	x



- R-800
- Charging indicator (blue)
 - Low-charge indicator (red)



- R-825
- Full battery gauge

Worldwide Voltage

- You can take your shaver with you when you travel to just about anywhere in the world. Your shaver features worldwide automatic voltage conversion providing AC current between 100-240 volts AC, 50-60 Hz. Just plug it in to the local outlet (you may need an adapter plug) and use as usual. Your shaver will convert automatically to the local current requirements.

Power System

- Cord/Cordless shavers can be used with or without the cord. They do not recharge during use, however, and frequent corded use will result in reduction of battery life.

 
How To Use

Getting a Close, Comfortable Shave


The Best Technique

It's simple to get a great shave from your new shaver. Here are a few tips for getting the closest shave possible:


Always use a clean, dry shaver. Make sure that the cutter head assembly is in the locked position.

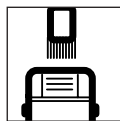

 Wait at least 15 minutes after getting up before shaving, to ensure the face is free of puffiness that may be present from sleeping.

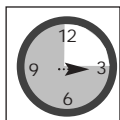

 Make sure your face is clean and dry before starting.

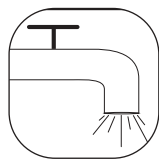


A shaving appliance is a washable shaver, the hand-held part of which may be cleaned under water.


To Shave

Push the on/off button to activate the shaver for shaving.

 
The MicroFlex® needs no adjustments to the heads or cutters before you shave.



 The floating heads will automatically adjust to the contours of your face. It is not necessary to apply pressure while shaving...let the shaver glide lightly on your skin. This gentle touch makes shaving easier and helps avoid possible skin irritation.



 Use short, circular strokes. Use your free hand to stretch your skin. This encourages your whiskers to stand out, making it easier for them to enter the cutting chamber.



To Trim

To use the Easy-View® locking pop-up trimmer, simply push the trimmer button up.



The trimmer will pop-up for use. Hold the shaver as shown in the illustration. To conserve battery energy (on rechargeable shavers only), it is recommended to use the trimmer only when needed for trimming. When through using, push the trimmer button downward to lock into the off position.

NOTE: It is important to always use the button to close the trimmer to avoid damaging the locking mechanism.

Trim Sideburns

Simply touch the comb-edge of the trimmer to the desired line for neat, clean sideburns.



Trim Mustache

Hold shaver at desired trim line for a quick, easy, professional trim. The trimmer can also be used to trim the upper edge of your mustache.



■ Always keep the protective head guard on the cutter head and keep the trimmer in the "off" position when the shaver is not in use. The head guard must be put on with the rear tab to the back of the shaver.

For a Better Shave

To help maximize your shaver's performance, consider using the Remington® Pre-Shave Powder Stick (SP-5). Just rub over your beard. It absorbs moisture and facial oils, helping set up the hairs so they enter the cutting chamber more easily. It makes shaving quicker and more comfortable.

ComfortSelect™ Suspension System

Your Remington shaver is equipped with ComfortSelect™ suspension system for personalized comfort. For a closer shave, move the ComfortSelect™ lever to the right. For a more comfortable shave with less irritation, move the lever to the left.



Usage Tips

Before using read the important safety instruction section in front of the manual.

Charging

Prior to using your shaver for the first time, put it on charge for 24 hours.

To charge your shaver:

- Make sure your shaver is turned off.
- Connect the cord to the shaver and then the charging adapter to the electric outlet. A charging indicator light will come on.
- Your shaver cannot be over-charged, so you can leave it plugged in and charging between shaves.
- Use only the charging adapter supplied with the shaver.
- Special feature allows you to run the shaver directly off the cord. Your shaver will not recharge while you are shaving, so after shaving directly from the cord, turn the unit off and set aside to charge.
- Provides up to two weeks worth of shaving after a one hour charge or a single shave after five minutes of charging.

NOTE: It may take up to 3 cycles for the battery to reach full capacity.

Model R-800

A blue indicator light shows charging. A red low-battery indicator illuminates to show when the shaver needs recharging. This also indicates approximately 5 minutes of shaving time left when indicator first comes on.

Model R-825

A blue lighted fuel gauge displays the amount of charge remaining in 20% increments. When only 20% of the charge remains, the recharge red warning light illuminates.

Troubleshooting:

- If your R-800/825 shaver battery is completely discharged or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this condition occurs, charge the shaver for approximately five minutes before shaving.
- Your cord/cordless shaver should not be used strictly as a cord-operated shaver, as continued cord only use will result in reduction of battery life.
- In order to preserve the life of the batteries, they should be fully discharged every six months and then fully charged for 24 hours.

Cleaning & Maintenance

 
Cleaning your shaver

TO ASSURE OPTIMAL PERFORMANCE, IT IS RECOMMENDED THAT YOU CLEAN YOUR SHAVER AFTER EACH USE.

Detach the handheld unit from the power supply cord before cleaning. The cutting system of this shaver was designed to be cleaned by rinsing under warm running water or by brushing.


Cleaning your Remington® branded shaver is easy.

- Open the hair pocket by pressing the release button and rotating away from the body of the shaver. You may blow out the stubble thoroughly, or rinse the shaver head in water. Rinse both sides of the head assembly.

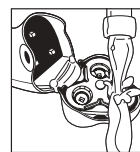


At Least Once a Week:

 For more complete cleaning, remove the cutter retainer assembly from the hair pocket by turning the center knob approximately 1/4 turn counter clockwise. Hold cutter retainer assembly as shown, and remove head by turning approximately 1/8 turn in the direction shown. Brush clean both the head and the cutter.

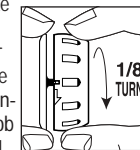

Reassemble head to cutter retainer assembly by aligning and turning head 1/8 turn in the opposite direction. Repeat this process for each of the 3 heads. Clean each head and cutter set one at a time to prevent mixing cutter components. (These should be kept as sets). After cleaning, place cutter retainer assembly in the hair pocket, and secure by turning center knob approximately 1/4 turn clockwise.

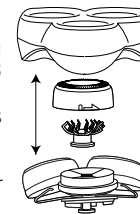 


Caution: Never put the shaver completely under water. Do not use any aggressive cleansing agent as this may destroy the shaver coatings.

- To clean and lubricate your shaver's cutters and head assembly, apply Remington® Shaver Saver® (SP-4) Lubricant. The lubricant helps remove hair clippings while reducing wear. A quick spray after each shave keeps your shaver operating at peak performance.

Caution: Do not remove or replace the head assembly while shaver is running or plugged into an electrical outlet as it may cause damage to the unit's cutters. The shaver shall not be used until it has dried.

 - Worn or damaged parts should be replaced with Remington® branded replacement parts only.



Performance Guarantee

When is it time to replace your heads and cutters?

It is very important to replace your heads and cutters when necessary to insure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed.

Irritation

As the heads get excessively worn there may be some skin irritation. This would be especially noticed when applying after shave lotion.

Pulling

When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

The replacement part for this shaver is model #SP-27.

U.S. residents: To order, contact us at 800-231-8793, visit us at www.remington-products.com or visit your local retailer.

Canadian residents: For any shaver accessory requirements, please call (800) 268-0425 or write: Remington Products (Canada) Inc., P.O. Box 601, Postal Station "T," Dept. A-100, 3019 Dufferin St., Toronto, Ontario, Canada M6B3T7.

Full Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

Warranty excludes:

- Screens and cutters

If the product should become defective within the warranty period, Spectrum Brands, Inc. will repair it or elect to replace it free of charge. We will return your product, shipping charges prepaid, if you do the following within two years of the purchase date:

 
 
 
1. Return the complete product in person or by mail, postage paid, to Customer Service, Spectrum Brands, Inc., 601 Rayovac Dr., Madison, WI 53711
2. Include the original purchase receipt with the product.
3. Include a description of the problem or defect.
4. Do not return the product to the store that sold it to you.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of it
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Any other conditions beyond our control. No responsibility, obligations, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations and exclusions may not apply to you.



Warranty

U.S. residents:
To order shaver accessories contact
us at 800-231-8793, visit us at
www.remington-products.com,
or visit your local retailer.

Canadian residents:
To order shaver accessories, please
call 800-268-0425 or visit us at
www.remington-products.com

Warranty Service

In the U.S. and Canada, service is provided
by authorized service dealers. For the
address of your nearest authorized service
dealer, contact us at 800-736-4648 (in
U.S.), 800-268-0425 (in Canada), visit our
website at www.remington-products.com
or consult your local Yellow Pages under
"Shaver-Electric-Repair."

KEEP ORIGINAL SALES RECEIPT AS
PROOF OF PURCHASE FOR WARRANTY
PURPOSES.

Questions or comments:
Call 800-736-4648 in U.S.
or 800-268-0425 in Canada.
Or visit www.remington-products.com

100-240 VAC 50/60 Hz
12vdc 650mA

REMINGTON, MICROFLEX, EASY VIEW,
COMFORT SELECT and SHAVER SAVER
are trademarks of ROVCAL, INC.
© 2006 ROVCAL, INC.
6/06 Job #CS29565

U.S. Patent D447,284 and Patents
Pending.

Dist. by: Spectrum Brands, Inc.,
Madison, WI 53711
800-736-4648

Dist. by: Spectrum Brands Canada, Inc.,
Mississauga, ON L4W 2T7
800-268-0425

MADE IN CHINA

T22-20907

