

# Braun 1008

# Braun 1012

# Braun 1013

Type 5462

- English  
4 Use instructions  
5 Guarantee  
25 Service Centres

- Türkçe  
6 Kullanılışı hakkında malûmat  
25 Garanti büroları ve merkezi servis yerleri

- Русский  
8 Инструкция по эксплуатации  
9 Гарантия  
25 Сервисные центры

- Українська  
11 Інструкція з експлуатації  
12 Гарантія  
25 Сервісні центри

- Latviešu  
14 Lietošanas instrukcijas  
15 Garantija

- Eesti  
16 Kasutusjuhend  
17 Garantii

 
 
 
 
 
 
 
 
 
 
- Lietuvių  
18 Naudojimo instrukcija  
19 Garantija

- 中文  
20 使用說明  
21 保證書

- عربي  
24 طرق الاستعمال  
22 ضمان  
25 مراكز الكفالات والصيانة

**BRAUN**

5-462-063/00/VIII-01  
GB/TR/RUS/UA/LV/EST/LT/PRC/Arab

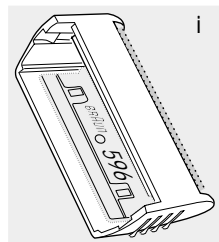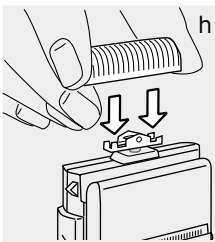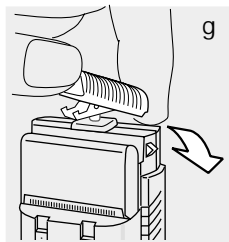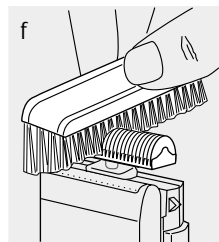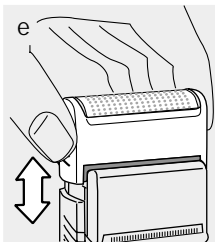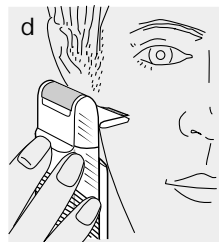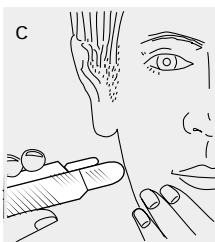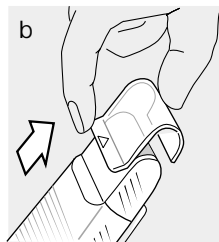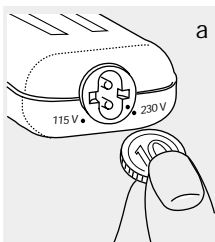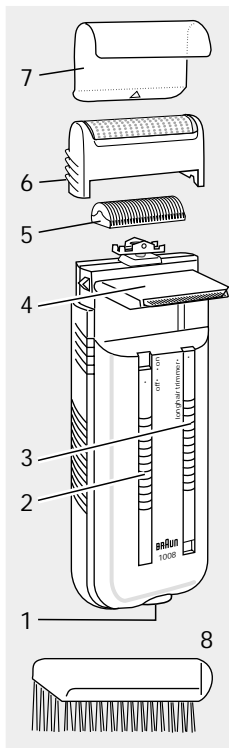

# English

Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy your new Braun appliance.

---

## Important

Keep the shaver and the mains lead dry at all times. Do not handle with wet hands. Do not store in a damp environment. To avoid damage do not wind the mains lead around the appliance. It is important to check the mains lead for damage periodically particularly at each end where the mains lead enters the plug.

---

## Description

- ① Socket for the mains lead with voltage selector
- ② «On/off» switch
- ③ Longhair trimmer switch
- ④ Pop-out longhair trimmer
- ⑤ Cutter block
- ⑥ Shaving foil frame
- ⑦ Foil protection cap
- ⑧ Cleaning brush

## Connection

115 V (110 V ... 120 V)  
230 V (220 V ... 240 V)  
Set the voltage correctly (115 V or 230 V) at the bottom of the shaver ① (a). Only connect to ac (-).

## Shaving

Remove the foil protection cap ⑦ (b). Push «on/off» switch ② up to «on».

Hold the shaver at right angles to your skin. Stretch your skin with your free hand (c). Guide the shaver smoothly against the direction of beard growth, applying only gentle pressure.

## Longhair trimming

To use pop-out longhair trimmer ④, push switch ③ all the way up to setting «longhair trimmer».

The longhair trimmer allows easy and exact trimming of the side burns (d). The longhair trimmer can be switched on and off during shaving.

## Switching the shaver off

Push the «on/off» switch ② back all the way to setting «off».

Important: After every shave replace the foil protection cap ⑦ on the foil frame ⑥.

## Cleaning and maintenance

After every shave, remove the foil frame ⑥ (e) and tap out lightly. Brush out the cutter block ⑤ with the cleaning brush ⑧ (f). Do not clean the shaving foil ⑥ with the cleaning brush to avoid damaging it. Approximately every four weeks clean the space between the longhair trimmer ④ and the shaver with the cleaning brush ⑧.

Clean the cutter block ⑤ with Braun cleaning spray to maintain your shaver's top shaving performance and to keep it hygienic.

After every cleaning replace the foil protection cap ⑦ on the foil frame ⑥.

## Changing the shaving parts

The shaving foil frame ⑥ should be held at the two grooved surfaces and pulled off (e).

The cutter block ⑤ can be removed (e.g. for cleaning) by turning it at right angles to the shaver and lifting it off

(g). To replace the cutter block, snap it onto the holding studs (h).

Replace the new foil frame in the right direction (e) until it locks in place.

### **Important**

Buy only original Braun spare parts, especially when replacing the mains lead or the shaving foil frame ⑥. When buying a new shaving foil frame look for the **BRAUN** brand and the correct identification number 596 (i).

Only this way you can be assured of a safe, close and efficient shave.

When looking to purchase a new Braun foil frame, ensure that you buy the right colour: a grey or black coloured frame.

Subject to change without notice.

### **Guarantee**

We grant 1 year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

### **For UK only:**

This guarantee in no way affects your rights under statutory law.