

# BRAUN

5441



+



# Flex Integral System

Type 5485



## Braun Infoline

 
Deutsch	4, 56, 61
English	8, 56, 61
Français	12, 56, 61
Español	16, 57, 61
Português	20, 57, 61
Italiano	24, 58, 61
Nederlands	28, 58, 61
Dansk	32, 59, 61
Norsk	36, 59, 61
Svenska	40, 59, 61
Suomi	44, 59, 61
Türkçe	48, 61
Ελληνικά	52, 60, 61

### Internet:


[www.braun.com](http://www.braun.com)

- (D)** Haben Sie Fragen zu diesem Produkt?  
Rufen Sie an: (in Deutschland und Österreich zum Nulltarif)  
**00 800 27 28 64 63**  
**00 800 BRAUNINFOLINE**
- (CH)** **08 44 - 88 40 10**
- (E)** Servicio al consumidor para España:  
**901-11 61 84**
- (P)** Serviço ao Consumidor para Portugal:  
**080 820 00 33**
- (I)** Servizio consumatori:  
**(02) 6 67 86 23**
- (NL)** Heeft u vragen over dit product?  
Bel Braun Consumenten-infolijn:  
**(070) 4 13 16 58**
- (B)** Vous avez des questions sur ce produit?  
Appelez Braun Belgique  
**(02) 711 92 11**
- (DK)** Har du spørgsmål om produktet? Så ring  
**70 15 00 13**
- (N)** Spørsmål om dette produktet? Ring  
**88 02 55 03**
- (S)** Frågor om apparaten? Ring Kundservice  
**020 - 21 33 21**
- (FIN)** Onko Sinulla kysyttävää tuotteesta? Soita  
**0203 77877**
- (TR)** Türkiye'deki Tüketici Danışma Servisi:  
**0 800 261 19 53**

# Flex Integral 5441

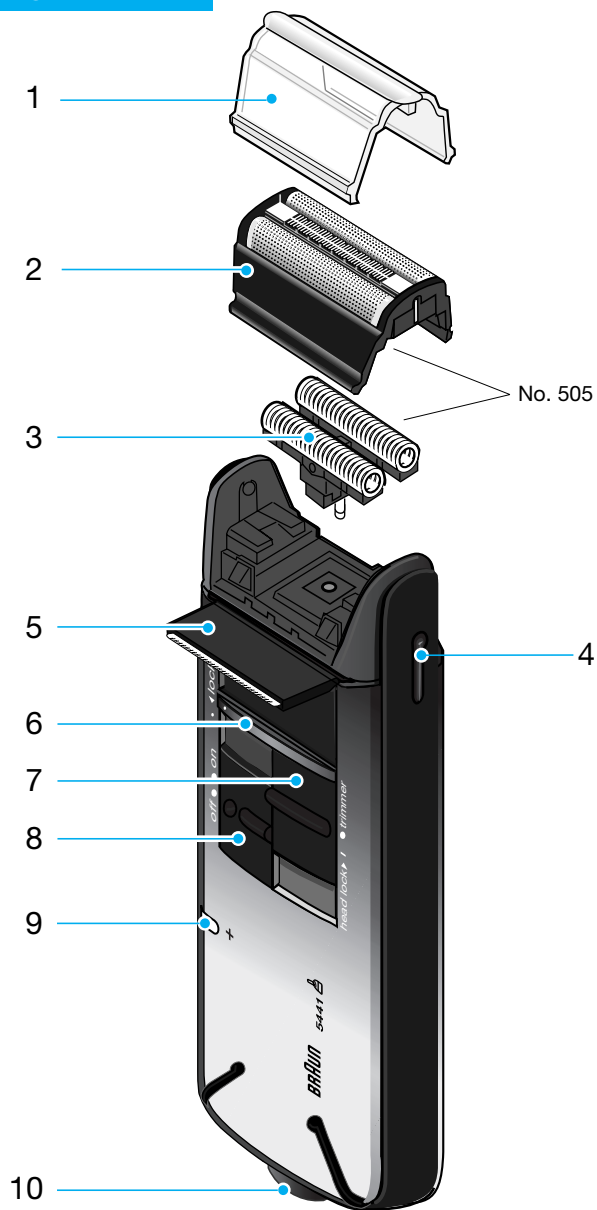

 Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun shaver.

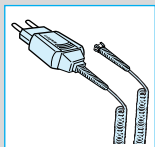

## Important

Only use the power supply cord set provided. A damaged cord must be replaced immediately.

## Description

 
 
 
- 1 Foil protection cap
- 2 Shaver foil
- 3 Cutter block
- 4 Foil release button
- 5 Pop-out long hair trimmer
- 6 Switch lock
- 7 Switch for locking the swivel head («head lock») and for activating the pop-out long hair trimmer («trimmer»)
- 8 On/off switch
- 9 Charging light
- 10 Shaver socket

## Technical specifications


- Wattage via cord set: 7 W
- Power supply via cord set: 100-240 V  $\approx$  / 50 or 60 Hz (automatic adaptation)
- Shaver input voltage: 12 V

## Charging the shaver

- **First charging:** Using the power supply cord set, connect the shaver to the mains with the switch on position «off» and charge it for at least 4 hours (plug might get warm).
- Once the shaver is completely charged, shave without the cord until fully discharged. Then recharge to full capacity again (subsequent charges will take about 1 hour).
- A full charge will give up to 50 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.
- Best environmental temperature range for charging is 15 °C to 35 °C.

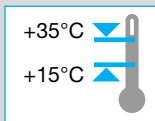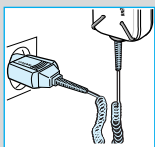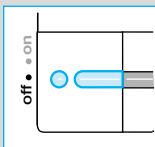

 - The charging light shows that the shaver is being charged. When the rechargeable battery is fully charged, the charging light goes off. If later on, the charging light comes on again, this indicates that the shaver is being recharged to maintain its full capacity.

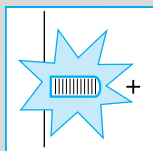

## Shaving

### Switch lock

The shaver is delivered with the switch lock activated (position «lock»). Push the switch lock up before you shave for the first time. To avoid accidentally switching the shaver on, e.g. when travelling, push the switch lock to position «lock».

### Switch positions

#### off

**on** Shaving with the pivoting head. The pivoting cutting system automatically adjusts to every contour of your face.

 
**head lock** Shaving with the pivoting head locked (to permit shaving in difficult areas, e.g. under the nose)

 
**trimmer** The long hair trimmer is activated (for trimming sideburns, moustache and beard).

### Shaving with the cord

If the rechargeable battery is discharged, you may also shave with the shaver connected to the mains via the power supply cord set.

(If the shaver does not run immediately, charge it with the switch on position «off» for approx. 1 minute.)

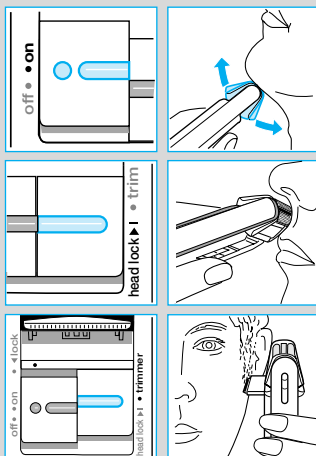

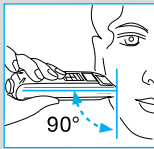

### Tips for the perfect shave

- We recommend that you shave before washing, as the skin tends to be slightly swollen after washing.
- Hold the shaver at right angles (90°) to the skin.
- Stretch your skin and shave against the direction of beard growth.
- Replace the shaver foil and cutter block every 1 1/2 years, or when the parts are worn, to ensure optimum shaving performance.



## Keeping your shaver in top shape

### Automated cleaning

The Braun Clean&Charge automatically takes care of all cleaning and lubrication needs of your shaver. Please refer to separate use instructions.

### Manual cleaning

For easy manual cleaning after each shave, switch the shaver off. Press the release button, take off the shaver foil and gently tap it out on a flat surface.

 
Using the brush, clean the cutter block and the inner area of the pivoting head. About every four weeks, clean the cutter block with Braun cleaning agents.

If your skin is very dry and you notice a reduced operation time of the shaver, apply a drop of light machine oil onto the shaver foil.

### Replacing the shaving parts

The shaver foil and cutter block are precision parts that, in time, are subject to wear. Replace your foil and cutter block every 18 months and get a 25% better shave.\* (Shaver foil and cutter block: part no. 505)

(\* Overall evaluation from Braun users comparing their shave with new parts and those used for 18 months.)

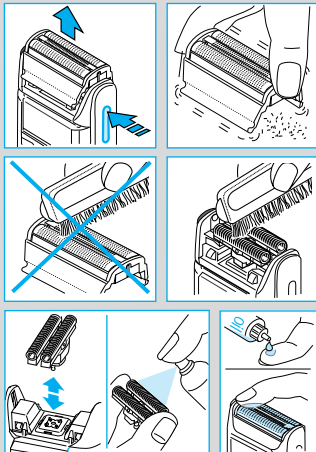


### Preserving the cell unit

- In order to maintain the optimum capacity of the rechargeable battery, the shaver has to be fully discharged (by shaving) every 6 months approximately. Then recharge the shaver to full capacity again. This reconditions the rechargeable battery.
- Do not expose the shaver to temperatures of more than 50 °C for longer periods of time.

## Accessories

available at your dealer or Braun Service Centres:

 - **Shaver foil and cutter block** (part no. 505)

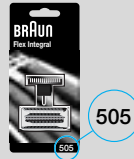


## Environmental notice

This appliance is provided with nickel-hydride rechargeable batteries. To protect the environment, do not dispose of the appliance in the household waste at the end of its useful life. Open the housing as shown, remove and dispose of the batteries at your retail store or at appropriate collection sites according to national or local regulations.

Subject to change without notice.

 This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).

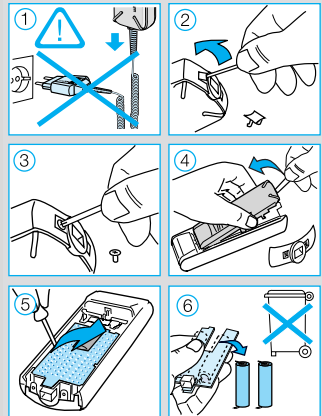

# Deutsch

## Garantie

Als Hersteller übernehmen wir für dieses Gerät – nach Wahl des Käufers zusätzlich zu den gesetzlichen Gewährleistungsansprüchen gegen den Verkäufer – eine Garantie von 1 Jahr ab Kaufdatum.

Innerhalb dieser Garantiezeit beseitigen wir nach unserer Wahl durch Reparatur oder Austausch des Gerätes unentgeltlich alle Mängel, die auf Material- oder Herstellungsfehlern beruhen.

Von der Garantie sind ausgenommen: Schäden, die auf unsachgemäßen Gebrauch (Knickstellen an der Scherfolie, Bruch) zurückzuführen sind, Scherfolien- und sonstiger normaler Verschleiß und Mängel, die den Wert oder die Gebrauchstauglichkeit des Gerätes nur unerheblich beeinflussen.

Bei Eingriffen nicht von uns autorisierter Stellen oder bei Verwendung anderer als original Braun Ersatzteile erlischt die Garantie.

Die Garantie tritt nur in Kraft, wenn das Kaufdatum durch Stempel und Unterschrift des Händlers auf der Garantiekarte und der Registrierkarte bestätigt ist. Sie kann in allen Ländern in Anspruch genommen werden, in denen dieses Gerät von Braun oder von uns autorisierten Händlern verkauft wird.

Im Garantiefall senden Sie bitte das vollständige Gerät mit der ausgefüllten Garantiekarte einem unserer autorisierten Servicehändler oder an eine Braun Kundendienststelle. Die Anschriften für Deutschland können Sie zum Nulltarif unter der Rufnummer 00 800/27 28 64 63 erfragen. Wir stehen Ihnen hier mit unserer Braun Infoline auch für weitere Fragen zu unseren Produkten gern zur Verfügung

# English

## Guarantee

Your Braun product comes complete with a 1 year guarantee that commences on the date of purchase. For you to obtain service within the guarantee period you must retain your sales receipt as proof of purchase.

## Please ensure you store your sales receipt in a safe place.

Within the guarantee period we will repair, free of charge, any defects in the appliance resulting from faults in materials or workmanship, but may, at our discretion, choose to exchange specific parts or replace the complete appliance.

This guarantee does not cover: damage arising from improper use (kinks in the shaver foil, breakage), normal wear and defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

The guarantee is valid for 12 months from the original date of purchase as per your sales receipt. The guarantee on any repairs or exchanges made under guarantee expires at the end of this period.

## For UK only:

This guarantee in no way affects your rights under statutory law.

# Français

## Garantie

Nous accordons une garantie d'un an sur ce produit, à partir de la date d'achat.

Pendant la durée de la garantie, Braun prendra gratuitement à sa charge la réparation des vices de fabrication ou de matières, en se réservant le droit de décider si certaines pièces doivent être réparées ou échangées, ou encore si l'appareil lui-même doit être échangé.

Les dommages occasionnés par une utilisation inadéquate (choc sur la grille, pièces brisées), l'usure normale de la grille et les défauts ne portant préjudice ni au bon fonctionnement ni à la valeur de l'appareil excluent toute prétention à la garantie.

La garantie devient caduque si des réparations ont été effectuées par des personnes non agréées par Braun et si des pièces de rechange ne provenant pas de Braun ont été utilisées.