

# BRAUN

## 5614



# Flex XP

Type 5 723



 
 
 
 
 
 
 
## Braun Infoline

Deutsch	4, 32, 36
English	6, 32, 36
Français	8, 32, 36
Español	10, 33, 36
Português	12, 33, 36
Italiano	14, 34, 36
Nederlands	16, 34, 36
Dansk	18, 34, 36
Norsk	20, 34, 36
Svenska	22, 35, 36
Suomi	24, 35, 36
Türkçe	26, 36
Ελληνικά	28, 35, 36

- (D)** Haben Sie Fragen zu diesem Produkt?  
Rufen Sie an: (in Deutschland und Österreich zum Nulltarif)  
**00 800 27 28 64 63**  
**00 800 BRAUNINFOLINE**
- (CH)** **08 44 - 88 40 10**
- (E)** Servicio al consumidor para España:  
**901-11 61 84**
- (P)** Serviço ao Consumidor para Portugal:  
**808 20 00 33**
- (I)** Servizio consumatori:  
**(02) 6 67 86 23**
- (NL)** Heeft u vragen over dit produkt?  
Bel Braun Consumenten-infolijn:  
**(070) 4 13 16 58**
- (B)** Vous avez des questions sur ce produit ?  
Appelez Braun Belgique  
**(02) 711 92 11**
- (DK)** Har du spørgsmål om produktet? Så ring  
**70 15 00 13**
- (N)** Spørsmål om dette produktet? Ring  
**88 02 55 03**
- (S)** Frågor om apparaten? Ring Kundservice  
**020 - 21 33 21**
- (FIN)** Onko Sinulla kysyttävää tuotteesta? Soita  
**0203 77877**
- (TR)** Türkiye'deki Tüketici Danışma Servisi:  
**0800 261 19 53**

### Internet:

[www.braun.com](http://www.braun.com)

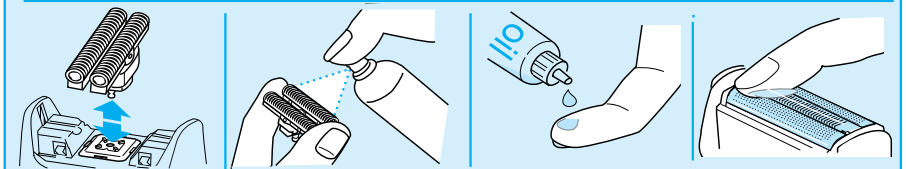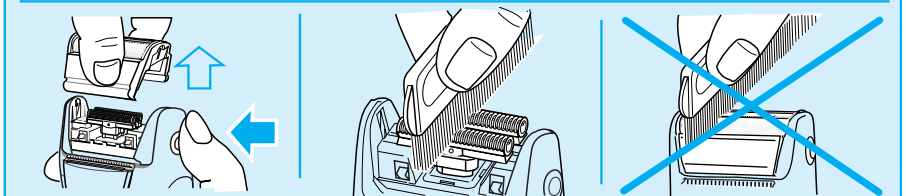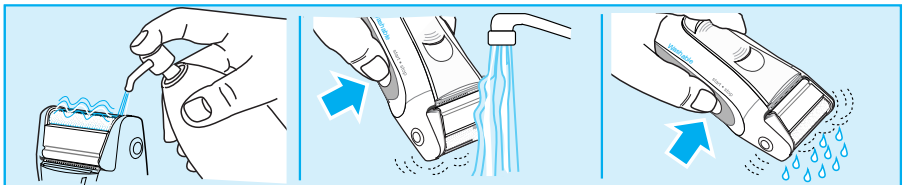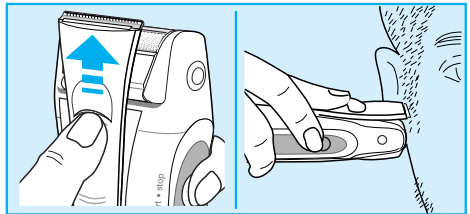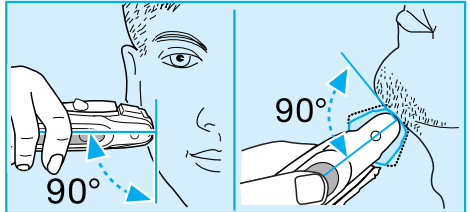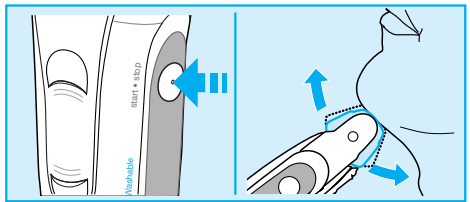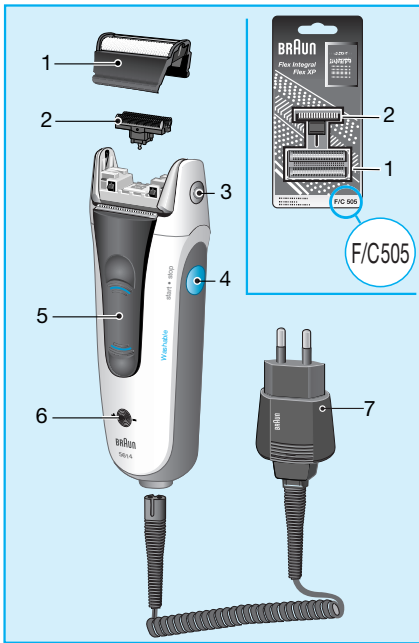

# English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun shaver.

## Warning

Your shaver is provided with a low voltage adapter. Therefore you must not exchange or manipulate any part of it. Otherwise there is risk of electric shock

## Technical specifications

Wattage via cord set: 7 W, automatic power supply: 100–240 V ≈ / 50–60 Hz

## Description

- 1 Shaver foil
- 2 Cutter block
- 3 Release button
- 4 On/off switch
- 5 Long hair trimmer
- 6 Dual function light: charging/low charge
- 7 Special power supply cord set

## Charging the shaver

- **First charging:** Using the power supply cord set, connect the shaver to the mains with the motor switched off. Charge it for at least 4 hours (shaver and adapter might get warm). Once the shaver is completely charged, shave until fully discharged. Then recharge to full capacity again (subsequent charges will take about 1 hour).
- When green, the dual function light indicates that the shaver is being charged. When the rechargeable battery is fully charged, the green light goes off. If later on, the green light comes on again, this indicates that the shaver is being recharged to maintain its full capacity.
- When red, the dual function light indicates that the battery capacity has dropped below 20%, provided the shaver is switched on. The remaining capacity will then be sufficient for 2 to 3 shaves.

- A full charge will give up to 50 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.
- Best environmental temperature range for charging is 15 °C to 35 °C.
- Shaving with the cord: If the rechargeable battery is discharged, you may also shave with the shaver connected to the mains via the power supply cord set.

## Shaving

Turn on the shaver («start»):  
The pivoting cutting system automatically adjusts to every contour of your face.

Trimmer:

When the long hair trimmer is activated, it allows the controlled trimming of moustache or sideburns.

### Tips for the perfect shave

- We recommend that you shave before washing, as the skin tends to be slightly swollen after washing.
- Hold the shaver at right angles (90°) to the skin. Stretch your skin and shave against the direction of beard growth.
- To ensure optimum shaving performance, we recommend to replace the shaver foil and cutter block every 18 months, or when the parts are worn.

## Keeping your shaver in top shape

### Cleaning under running water

After each shave, turn on the shaver and clean it under running hot water. Occasionally use soap (natural based liquid soap without particles and abrasive substances). Then rinse off all foam and let the shaver run for another moment.

### **Dry cleaning**

Instead of cleaning under running water, you may dry clean your shaver: turn the shaver off, remove the shaver foil (shaver head must be in central position) and, using the brush, clean the cutter block and the inner area of the shaver head.

Do not clean the shaver foil with the brush.

### **General cleaning**

About every four weeks, clean the cutter block with Braun cleaning agents.

Put a drop of light machine oil onto the long hair trimmer and shaver foil.

### **Replacing the shaving parts**

The shaver foil and cutter block are precision parts that, in time, are subject to wear.

Replace your foil frame and cutter block every 18 months and get a 25% better shave.\* (Shaver foil and cutter block: part no. F/C505, available at your dealer or Braun Service Centres).

\* (Overall evaluation from Braun users comparing their shave with new parts and those used for 18 months.)

### **Preserving the batteries**

- In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (by shaving) every 6 months approximately. Then recharge the shaver to full capacity again.
- Do not expose the shaver to temperatures of more than 50 °C for longer periods of time.

 
## **Environmental notice**

This appliance is provided with nickel-hydride batteries. They do not contain any harmful heavy metals. Nevertheless, please do not dispose of this appliance in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or appropriate collection sites. However, if you prefer to dispose of the product yourself, remove the batteries as shown on page 31.

Subject to change without notice.

This product conforms to the EMC-Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC).



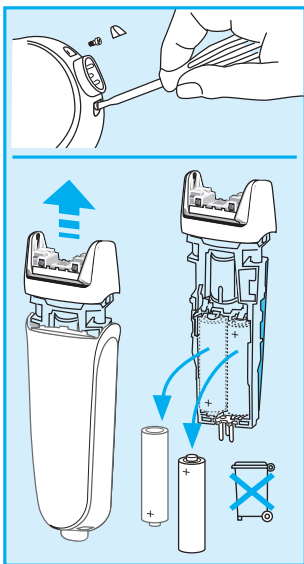

### Deutsch

#### **Akku-Entsorgung am Ende der Lebensdauer des Gerätes**

Vorsicht! Durch das Öffnen wird das Gerät zerstört. Keine Garantie für ein geöffnetes Gerät.

### English

#### **Battery removal at the end of the product's useful life**

Caution: Opening the handle will destroy the appliance and invalidate the guarantee.

### Français

#### **Retrait des batteries à la fin de la durée de vie du produit**

Attention : en ouvrant l'appareil, vous le détruisez et la garantie est invalidée.

### Español

#### **Extracción de la pila al finalizar la vida útil del producto**

Aviso: La apertura del mango inutilizará el aparato e invalidará la garantía.

### Português

#### **Remoção da bateria no fim da vida útil do produto**

Atenção: a abertura do cabo da escova destrói o aparelho e invalida a garantia.

### Italiano

#### **Eliminazione delle batterie alla fine del ciclo di vita del prodotto**

Attenzione: l'apertura del corpo motore distrugge lo strumento ed invalida la garanzia del prodotto.

### Nederlands

#### **Het verwijderen van batterijen aan het eind van de nuttige levensduur van het apparaat**

Waarschuwing: het openen van het aandrijfdeel zal het apparaat onbruikbaar maken en daarmee zal de garantie op het apparaat vervallen.

### Dansk

#### **Udtagelse af batteriet efter endt levetid**

Være endvidere opmærksom på, at så snart batteriet fjernes eller forsøges taget ud, bortfalder garantien.

### Norsk

#### **Fjerning av batteriet ved slutten av apparatets levetid**

Advarsel: Åpning av motordelen vil ødelegge apparatet, og gjøre garantien ugyldig.

### Svenska

#### **Att avlägsna batteriet när produkten är uttjänt**

Varning: Genom att öppna motordelen förstörs apparaten och garantin slutar att gälla.

### Suomi

#### **Akun irrottaminen laitteen käyttöiän loputtua**

Varoitus: runko-osan avaaminen tekee laitteesta käyttökelvottoman. Takuu ei koske avattua laitetta.

### Türkçe

#### **Cihazın ömrü bittiğinde pili çıkarma**

Dikkat: Gövdesi açılmış cihaz garanti kapsamı dışındadır.

### Ελληνικά

#### **Για να βγάλετε τη μπαταρία μετά τη χρήσιμη ζωή της**

Προσοχή: Ανοίγοντας τη λαβή η συσκευή καταστρέφεται και η εγγύηση παύει να ισχύει.

# Deutsch

## Garantie

Als Hersteller übernehmen wir für dieses Gerät – **nach Wahl des Käufers zusätzlich zu den gesetzlichen Gewährleistungsansprüchen gegen den Verkäufer** – eine Garantie von 2 Jahren ab Kaufdatum. Innerhalb dieser Garantiezeit beseitigen wir nach unserer Wahl durch Reparatur oder Austausch des Gerätes unentgeltlich alle Mängel, die auf Material- oder Herstellungsfehlern beruhen.

Die Garantie kann in allen Ländern in Anspruch genommen werden, in denen dieses Braun Gerät von uns autorisiert verkauft wird.

Von der Garantie sind ausgenommen: Schäden durch unsachgemäßen Gebrauch, normaler Verschleiß und Verbrauch sowie Mängel, die den Wert oder die Gebrauchstauglichkeit des Gerätes nur unerheblich beeinflussen. Bei Eingriffen durch nicht von uns autorisierte Braun Kundendienstpartner sowie bei Verwendung anderer als Original Braun Ersatzteile erlischt die Garantie.

Im Garantiefall senden Sie das Gerät mit Kaufbeleg bitte an einen autorisierten Braun Kundendienstpartner. Die Anschrift für Deutschland können Sie kostenlos unter 00800/27 28 64 63 erfragen.

## English

### Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The

guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

### For UK only:

This guarantee in no way affects your rights under statutory law.

## France

### Garantie

Nous accordons une garantie de 2 ans sur ce produit, à partir de la date d'achat. Pendant la durée de la garantie, Braun prendra gratuitement à sa charge la réparation des vices de fabrication ou de matière en se réservant le droit de décider si certaines pièces doivent être réparées ou si l'appareil lui-même doit être échangé.

Cette garantie s'étend à tous les pays où cet appareil est commercialisé par Braun ou son distributeur exclusif.

Cette garantie ne couvre pas : les dommages occasionnés par une utilisation inadéquate et l'usure normale. Cette garantie devient caduque si des réparations ont été effectuées par des personnes non agréées par Braun et si des pièces de rechange ne provenant pas de Braun ont été utilisées.

Pour toute réclamation intervenant pendant la période de garantie, retournez ou rapportez l'appareil ainsi que l'attestation de garantie à votre revendeur ou à un Centre Service Agréé Braun.

Appelez au 01.47.48.70.00 pour connaître le Centre Service Agréé Braun le plus proche de chez vous.

### Clause spéciale pour la France

Outre la garantie contractuelle exposée ci-dessus, nos clients bénéficient de la garantie légale des vices cachés prévue aux articles 1641 et suivants du Code civil.