

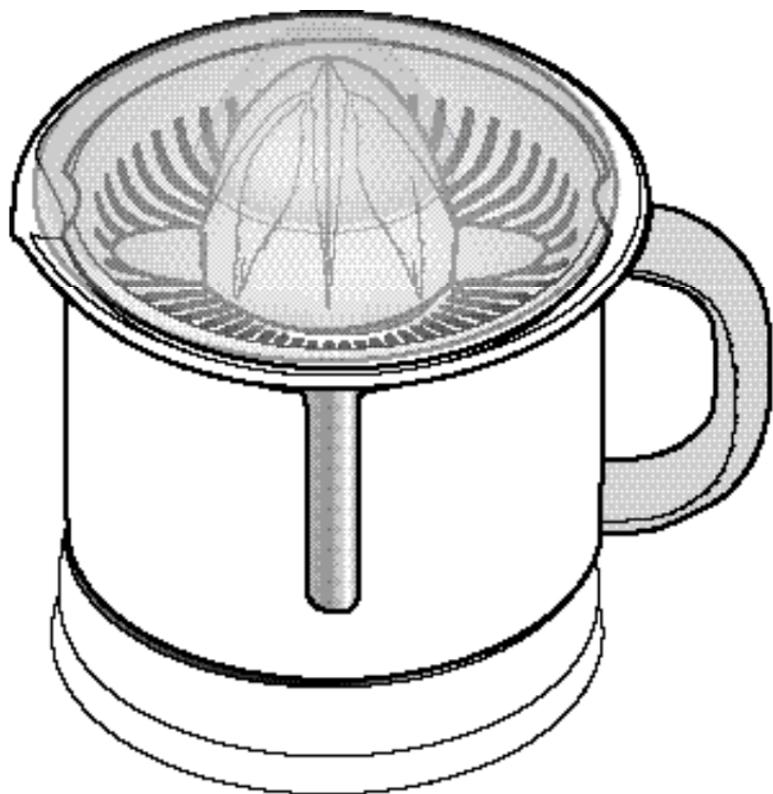
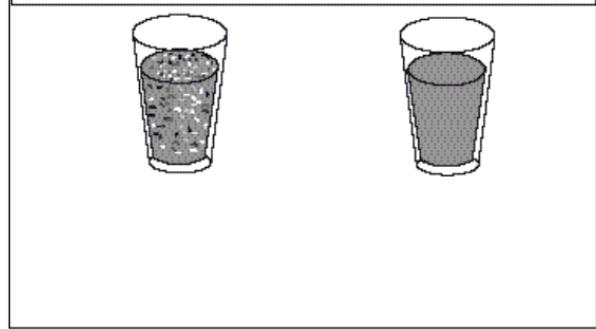
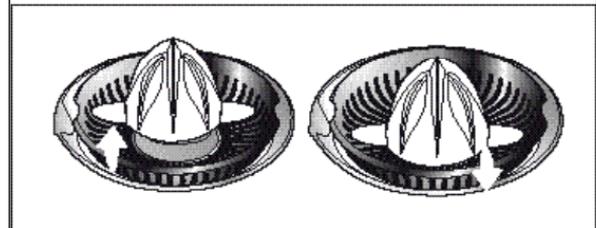
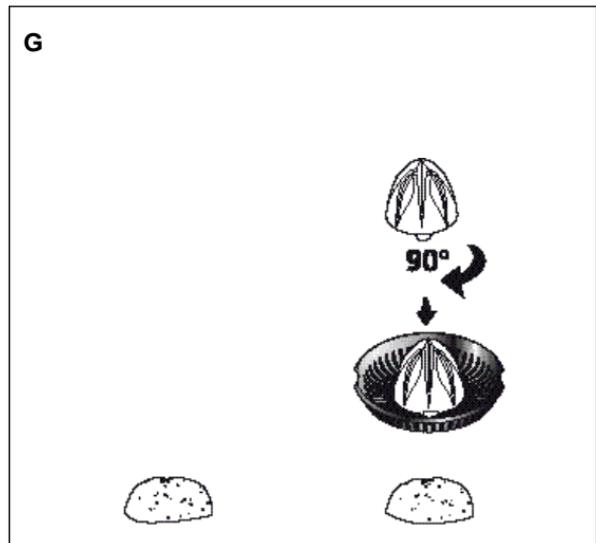
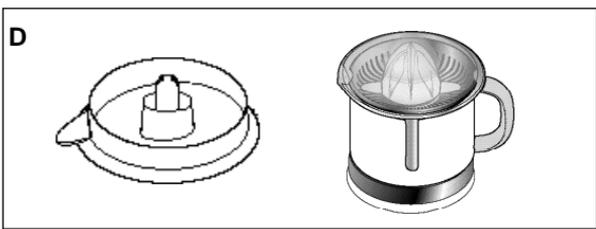
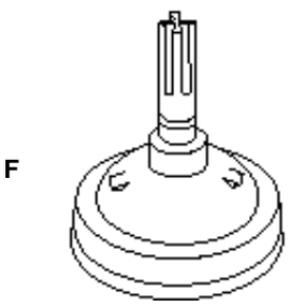
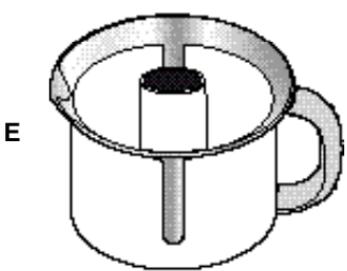


KRUPS

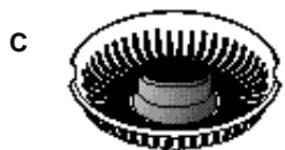

www.krups.com

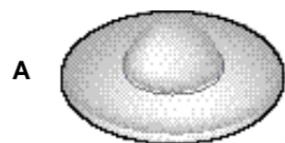

English

Description

- A Lid
- B Cone
- C Strainer dish
- D Fountain accessory (according to model)
- E Pouring Jug
- F Motor unit

Safety instructions Recommendations

- **Carefully read the instruction leaflet before first using your appliance: Krups may not be held responsible for any incorrect use of the appliance.**
- **Young children and handicapped persons should only use the appliance under close supervision by a responsible adult.**
- Do not use the appliance if the power supply cord or plug are damaged. For safety reasons have the power supply cord or plug replaced by a Krups approved service centre (see list in the service handbook).
- Disconnect your appliance as soon as you have finished using it to clean it.
- Never put the appliance, the plug or the power supply cord in water or any other liquid.
- Check that your appliance's power supply rating corresponds to your mains electrical supply.
- **This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.**

Start up

1. **Before first use**, clean the parts that will be in contact with food.

2. Install the Pouring Jug (**E**), the Filter (**C**) and the Cone (**B**) on the motor unit (**F**) as shown on the drawing.
Cut a citrus fruit in two and press each half gently onto the cone.
Recover the juice in the pouring jug.
3. On some models, you can use the fountain accessory (**D**) to pour the juice directly into a glass. To do so, place the fountain accessory (**D**) between the pouring jug (**E**) and the sieve (**C**) and then place a glass under the spout.
4. You can also adjust the amount of pulp by changing the position of the cone (**drawing G**):
top position : very little pulp.
bottom position: a lot of pulp.
Never run the citrus press for more than 10 minutes continuously.

Cleaning

- Clean the motor unit with a damp cloth.
- You can wash all other parts in the dishwasher (upper basket).
- Never use bleach or a scouring pad.
- Over time the strong coloured natural juices from food such as carrots and beetroot may stain the sieve- this is normal. It may be cleaned by soaking in milk bleach (not abrasive) straight after use.
- If you have any product problems or queries, please contact our Customer Relations Team first for expert help and advice